

HydroSure

IRRIGATION SYSTEMS THAT WORK


We would like to share some tips with you to help you get the most out of your new Tripod Sprinkler Kit.

Kit Contents:

- HydroSure Sprinkler Head - 1/2"
- Sprinkler Tripod - 1/2" & 3/4"
- Hydrosure 90 Degree Tap Connector - 3/4"
- PTFE Tape

Installation:

1. Wrap PTFE around all male threaded outlets to ensure a watertight connection.
2. Thread your sprinkler head into the outlet of the tripod riser.
3. Attach your hose pipe to the quick click connector using a quick click hose connector (sold separately).
4. Adjust the riser to the height required.
5. Adjust the spray distance on your sprinkler head using the screw.

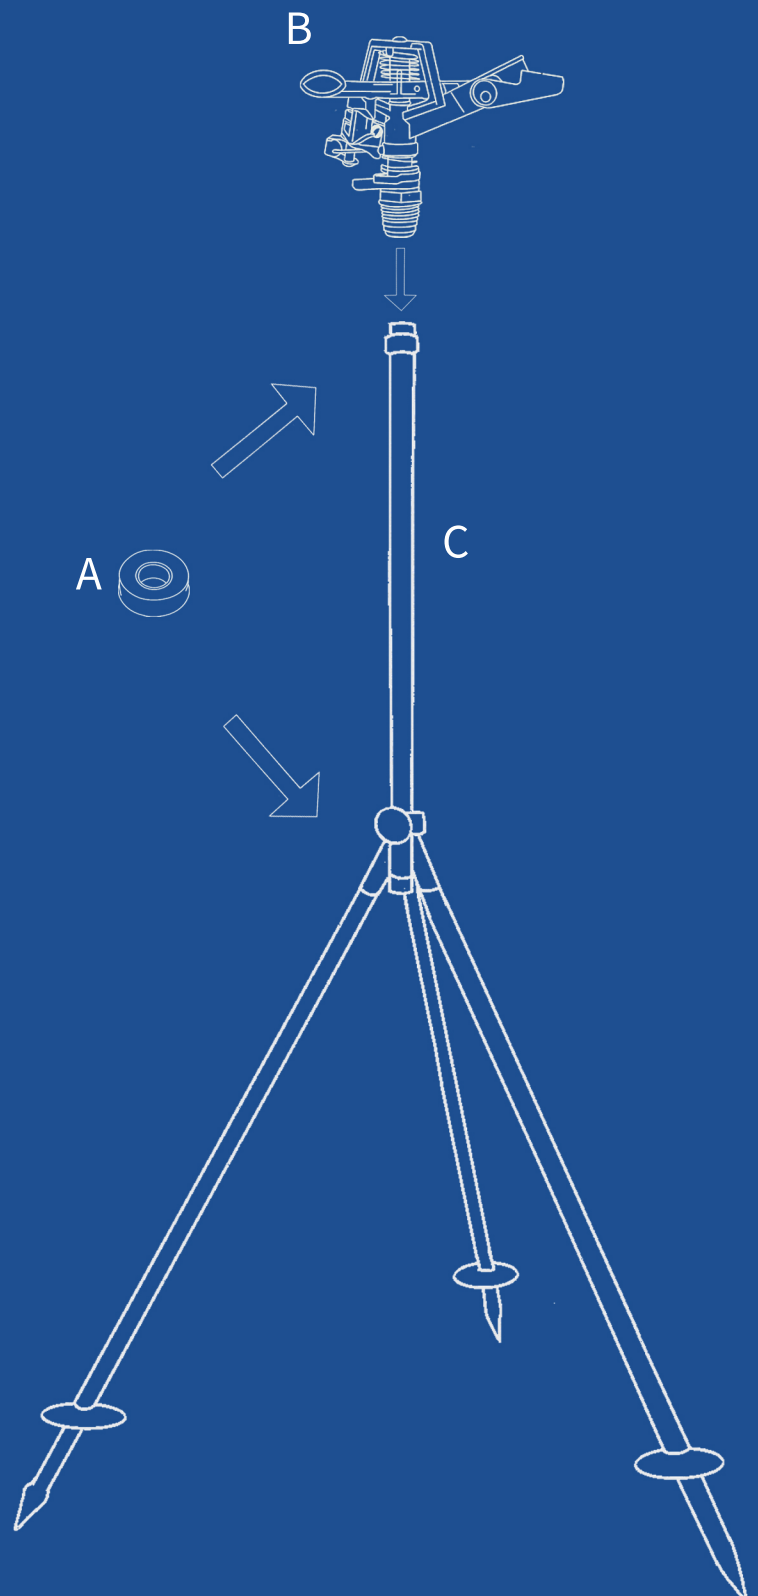

- A. PTFE Tape
- B. HydroSure Sprinkler Head - 1/2"
- C. Sprinkler Tripod - 1/2" & 3/4"

HydroSure

IRRIGATION SYSTEMS THAT WORK

1. Use the trip collar to adjust the watering area that the sprinkler head will cover. The closer the collars are to the trip lever, the narrower the spray pattern will be.

For a full circle spray pattern, simply lift up the trip lever so it can spin the full 360 degrees without restriction of the collar.

2. This sprinkler head operates at pressures between 2-4 bar for continuous rotation.

3. The screw can be used to change the distance that the sprinkler will spray.

If you would like to decrease the spray distance, turn the screw clockwise. The screw will then start to cover the water nozzle.

4. Adjust the height of the sprinkler riser using the adjustment bolt. Unscrew the bolt to loosen the riser and then when the riser is the correct height, tighten the bolt to secure the riser in place.

The maximum height is 100cm.

5. To convert the tripod outlet into a 3/4" outlet, simply unscrew the nut to reveal a 3/4" male outlet thread.

6. The 3/4" 90 degree tap connector can be used directly on your tap to connect to the hose or it can be used on the tripod outlet at the bottom of the riser.

